




Remove old threshold and clean floor surface.

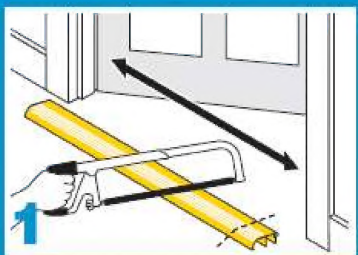

Measure door opening at floor level and cut threshold to fit with hacksaw. Trim equal amount from each end.

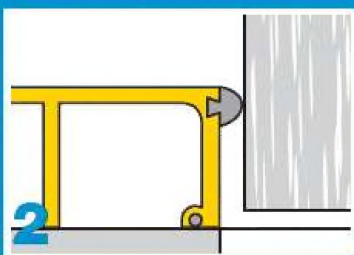

With door closed, position threshold so vinyl seal compresses against door.

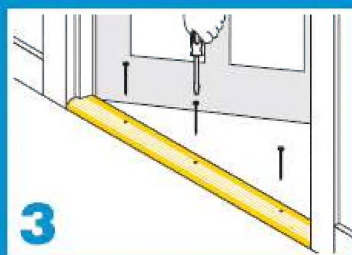

Install with fasteners (included). Plastic or lead anchors required for installation on concrete (detailed instructions on back of label).

Quite el sardinel existente y limpie la superficie del piso.

- 1 Mida la abertura de la puerta en el piso y corte el sardinel a ese tamaño con una segueta. Recorte cada extremo al mismo largo.
- 2 Con la puerta cerrada, coloque el sardinel de modo que el sello de vinilo se comprima cntra la puerta.
- 3 Instale con los sujetadores (provistos). Para instalar en concreto se requieren anclajes plásticos o de plomo (vea los detalles para la instalación al reverso).